

OCS SERIES CRANE SCALE PASSWORD

Below is a list of those modes that require password to access scale functions.

Mode	Password
Scale Configuration	0258
Calibration	8416
System Info	1860
Power Adjustment	1123
Overload Record Clear	4321