



Remarks:

1. After the Loading Screw (item #14 on the drawing) is set to the desired level, apply a little silicone to the Load Screw from underneath to keep it tight.
2. Remove Lock Plate (item #10 on the drawing) after installation.
3. Two Positioning Bolts (item #7 on the drawing) shall be in the top plate's two holes. After being fastened, these bolts shall be 3 mm below the surface of the top plate but not touch the top plate.
4. Recommended tighten torque for load cell is 90 to 110Nm.

IMPORTANT NOTICE

This document consisting confidential proprietary information belongs to ANYLOAD who retains all copy and other rights. This document is submitted under a confidential relationship for specific purpose, and the receipt agrees by accepting this document not to supply or disclose any information regarding it to any unauthorized person.

16	Shield			1	
15	Spacer			1	
14	Loading Screw			1	
13	Cylinder Ring			1	
12	Loading Pin			1	
11	Cap			1	
10	Lock plate			1	
9	Fastern bolt	M6X10		4	
8	Nut	M12X35		2	
7	Positioning bolt	M12X65		2	
6	Top plate			1	
5	Shield fastern bolt	M6X10		2	
4	Load cell fastern bolt	M12X55		2	
3	Washer	Ø12		2	
2	Load Cell			1	563YH
1	Base plate			1	
ITEM	DESCRIPTION	MATERIAL	SPECIFICATION	QTY	REMARKS

V0	APPROVED	Alex. T	DATE	88-88-88
CHECKED	Allen. Z	DATE	15-07-01	
DRAWN	Felix. Z	DATE	15-07-01	

ANYLOAD

TITLE:

563YHM4-(100-SE5000)1b
General Arrangement

DRAWING NO. : LM1506005

PROJECTION: SHEET 1 OF 1