

# Technical Manual

## The 815BS LCD Industrial Weighing Indicator

WEIGHT MODE, PEAK MODE, COUNT MODE, CHECK WEIGHING, DUAL COM PORTS



**ANYLOAD®**

---

<b>1.</b>	<b>Introduction .....</b>	<b>2</b>
1.1	Main Features .....	2
1.2	Technical Specifications .....	3
<b>2.</b>	<b>Installation .....</b>	<b>4</b>
2.1	Safety Precautions .....	4
2.2	Main Enclosure .....	5
2.3	Opening Enclosure .....	7
2.4	Mounting Enclosure .....	7
<b>3.</b>	<b>Wiring .....</b>	<b>8</b>
3.1	Controller Board Terminals .....	8
3.2	Electrical Power Wiring .....	9
3.3	Load Cell Wiring .....	10
3.4	Serial Communication Wiring .....	11
<b>4.</b>	<b>Configuration.....</b>	<b>12</b>
4.1	Indicator Setup Menu .....	12
4.2	Indicator Operating Modes .....	12
4.3	Indicator Display Symbols .....	13
4.4	Indicator Membrane Keypad .....	14
4.5	F1 Formats .....	18
4.6	F2 Configuration .....	19
4.7	F3 Calibration .....	20
4.8	F4 Filtering .....	21
4.9	F5 Communications.....	22
4.10	F6 Auxiliaries .....	23
4.12	F7 Utilities .....	24
<b>5.</b>	<b>Calibration .....</b>	<b>25</b>
5.1	Zero Calibration.....	26
5.2	Span Calibration.....	26
<b>6.</b>	<b>Sealing.....</b>	<b>27</b>
6.1	Physical Sealing .....	27
6.2	Electronic Sealing .....	27
<b>7.</b>	<b>Auxiliaries .....</b>	<b>28</b>
7.1	Peak Mode.....	28
7.2	Count Mode.....	29
7.3	Set Point.....	30
7.4	Serial Protocols .....	31
7.5	Back Light .....	31
7.6	Ticket Printing .....	32
<b>8.</b>	<b>Troubleshooting .....</b>	<b>33</b>
8.1	Controller Board .....	33
8.2	Error Codes.....	34
8.3	Jumper Setting .....	34
8.4	Battery Symbol .....	35
8.5	Advance Diagnostic.....	36

---

## I. ABOUT THIS MANUAL

Thank you for choosing Anyload 815BS industrial LCD weight Indicator. This 815BS technical manual provides installation, setup, operation, and configuration information for the 815BS industrial LCD Indicators. This manual is intended to be used by trained service technicians and installers. It is recommended to go through the manual in details before installing, operating or configuring the instrument. For further information please contact Anyload Weigh & Measure Inc. authorized dealer.

## II. DISCLAIMER




Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is the property of Anyload Weigh & Measure Inc. All other brand or product names within this publication are trademarks or registered trademarks of their respective companies. All information contained within this publication is, to the best of our knowledge, complete and accurate at the time of publication.

**ANYLOAD®** is a registered trademark of Anyload Weigh & Measure Inc. Copyright © 2021 Anyload Weigh & Measure Inc. All rights reserved.

## III. SAFETY

Standard safety practices are required before conducting any installation, maintenance, or procedure on device. It is recommended to read and understand the instructions and warnings in this manual before performing any procedure on device. Failure to follow the instructions and warnings could result in injury or death.






Definition of the safety symbols is described in table below.

Symbol	Description
	<p><b>WARNING!</b></p> <p>Indicates a potentially hazardous situation which may result in serious injury or death Indicates a potentially dangerous procedure which may cause injury or death</p>
	<p><b>CAUTION!</b></p> <p>Indicates a potentially wrong procedure which may result in damage to device Indicates a potentially wrong procedure which may result in loss of warranty</p>
	<p><b>NOTICE!</b></p> <p>Indicates a procedure which may need more instructions Indicates a procedure which has more information available</p>

# 1. INTRODUCTION

## 1.1 MAIN FEATURES

- Six digits 1.0” seven segments LCD industrial weight indicator.
- Standard seven segments with capability to display alphanumerical characters.
- Tri color back light in green, red, and amber colors.
- Indication of up to four units of lb, kg, oz, and gr.
- Indication of gross, net, and tare.
- Indication of stability, and center of zero.
- Indication of auxiliary functions of peak mode, parts count, and set points.
- Up to one million internal counts accuracy with 24bits resolution.
- Auxiliary functions for peak mode, set point, and piece counting.
- Password protected setup and calibration menu.
- Physical and electronic sealing with audit trail function.
- Four or six wires load cells at 0-19mV
- Up to four 350R or eight 700R load cells with 5V excitation.
- Advance analogue, average, and digital filtering for better stability.
- Two independent RS232 port for streaming and printing.
- Standard desk mount bracket.
- Weatherproof stainless steel NEMA 4/IP66 enclosure.
- UL approved encapsulated multi sense voltage internal power supply.
- Built in battery with internal charger.
- Breather ventilation to avoid condensation inside enclosure.
- Designed and developed by Anyload Weigh & Measure Inc. in Canada.

Item	Approvals	Description
	<b>UL/cUL</b>	Class II UL / cUL Approved Internal Multi Sense Power Supply, LPS, CB, CE
	<b>NTEP</b>	NTEP USA 10,000d Class III/IIIL
	<b>MC</b>	Measurement Canada 10,000d/20,000d Class III/IIIIHD
	<b>OIML</b>	OIML EU Pending
	<b>CE</b>	LVD and ECD

## 1.2 TECHNICAL SPECIFICATIONS

The technical specifications of 815BS indicators are as follows:

Item	Specification	Description
1	Display Digits	1.0" (25mm) height, 6 digits, 7 segments
2	Digit Segments	LCD with green, red, or amber back lighting
3	Micro Controller	30MHz ARM Cortex M® processor
4	Units Indication	4 units annunciators for lb, kg, oz, and gr
5	Status Indication	4 status annunciators for stability, center of zero, gross, and net
6	Membrane Keypad	6 keys domed membrane keypad with buzzer indication
7	Decimal Point	4 decimal point places
8	Communication Ports	2 independent serial ports for RS232
9	Communication Baud	1200,2400,4800,9600,19200, 38400 baud rates
10	Excitation Voltage	5V to supply 4 X 350R or 8 X 700R load cells
11	Input Range	0-19mV
12	Measurement Speed	80 samples / sec
13	Internal Accuracy	1,000,000 internal counts with 24bits ADC
14	Internal Filtering	3 levels include analogue, digital, and display filtering
15	Battery	7.4V / 10,000mAH internal battery with built in charger
16	Main Enclosure	Stainless steel NEMA 4 / IP66 weatherproof
17	Power Supply	Input: 100-240VAC, 0.5A, 50/60Hz / Output: 12VDC, 2.0A, 25W
18	Power Consumption	120VAC @ 0.1A / 12VDC @ 0.5A (10W AC / 5W DC) typical
19	Operating Temperature	-10°F to 120°F (-10°C to 50°C)
20	Operating Humidity	20%RH to 90%RH
21	Enclosure Ventilation	GORE <sup>®</sup> breather vent to avoid condensation
22	Physical Dimensions	9.1" W X 7.4" H X 3.0" D (231mm X 188mm X 76mm) includes base
23	Total Weight	2.5kg (5lb) main unit and base, approximately
24	Industry Approvals	UL approved external universal wall adopter, LPS, CE
25	Regulatory Approvals	NTEP / MC and CE




## 2. INSTALLATION

### 2.1 SAFETY PRECAUTIONS

Please practice safety before conducting any installation, maintenance, or procedure on device.

- ✓ The 815BS indicators are pre-wired AC/DC devices with multi sense voltage.
- ✓ It is necessary to practice safety checks before any installation or maintenance.
- ✓ Do not operate this device unless all instructions in this manual have been read.
- ✓ All installation and maintenance shall be conducted by trained service technicians.
- ✓ Avoid any alteration or changes to the device other than factory provided options.
- ✓ Disconnect power source before any installation or maintenance.
- ✓ Make sure proper grounding is provided at the site.
- ✓ Make sure device is properly grounded if custom wiring is provided.
- ✓ Make sure site structure can bear weight of the indicator.
- ✓ Make sure enough clearance is available around the device for accessibility.
- ✓ Make sure all warning signs are visible and not damaged or altered.
- ✓ Follow warning and caution notes in this manual.



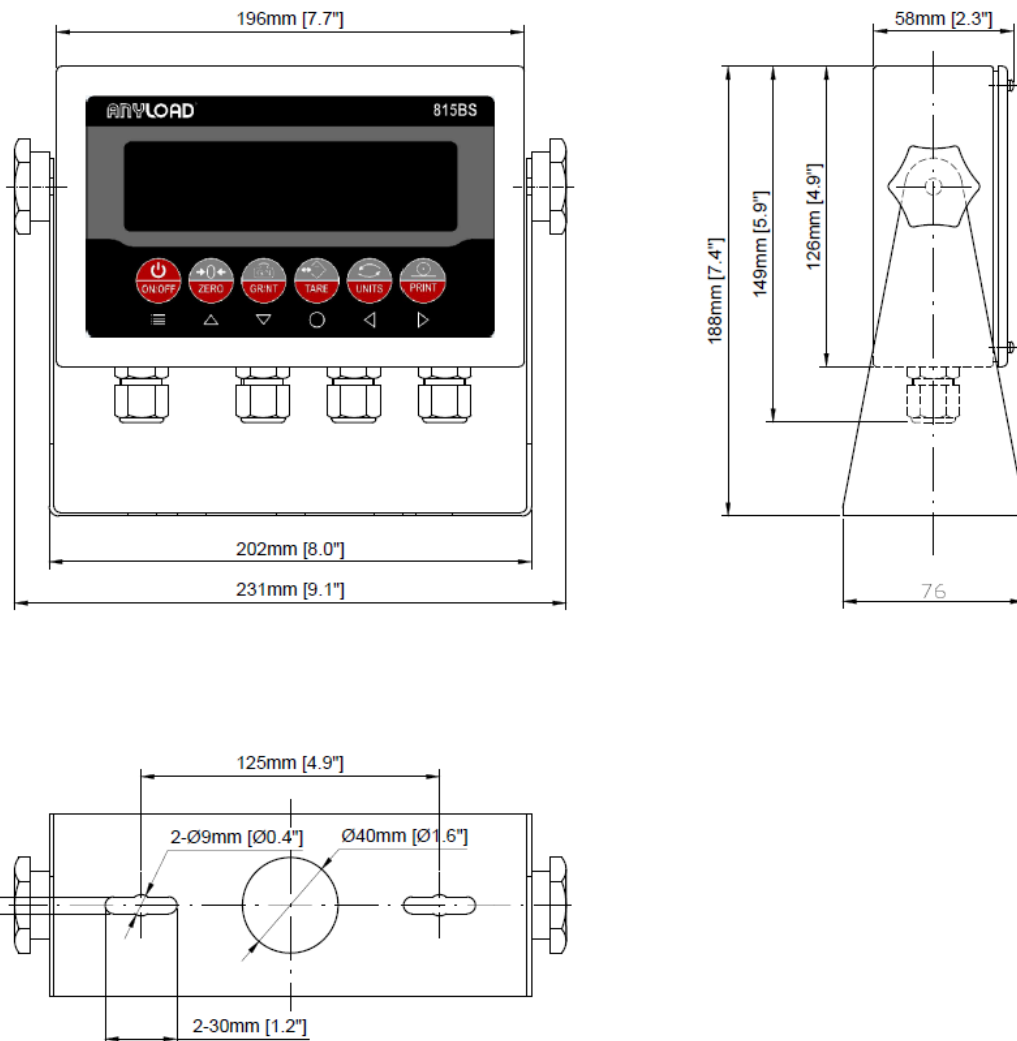
Symbol	Description
	<p><b>WARNING!</b></p> <p>Make sure the power source is disconnected before any installation                      Make sure the site has proper grounding</p>
	<p><b>CAUTION!</b></p> <p>Any unauthorized change or alteration in default wiring may void warranty                      Any installation and wiring must be handled by authorized personnel</p>
	<p><b>NOTICE!</b></p> <p>Refer to the local electrical code for the wiring color codes                      Refer to the installation section for instructions to how to access to the wiring terminals</p>


## 2.2 MAIN ENCLOSURE

The main enclosure of the 815BS is a stainless-steel metal enclosure protected by eight screws on the back for easy service. The enclosure is a weatherproof stainless steel with standard desk mount bracket included in the package. All internal parts are installed and mounted inside of the enclosure. An internal battery installed inside the enclosure on the cover.


To open the enclosure, there are eight screws located on the back cover to be opened.

The dimensions provided are determined in mm (inches).



Symbol	Description
	<p><b>NOTICE!</b></p> <p>Make sure device is properly grounded if custom wiring is provided.                      Make sure site structure can bear weight of the indicator.                      Make sure enough clearance is available around the device for accessibility.</p>

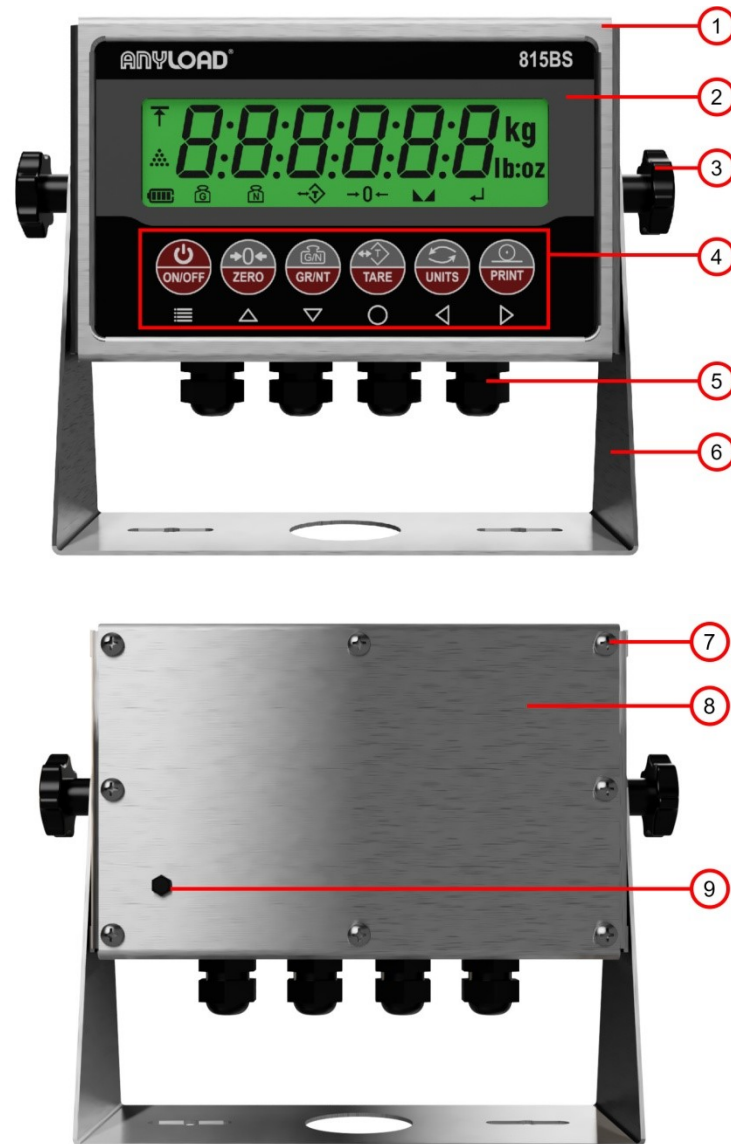The 815BS indicators are consisted of following mechanical parts.



Item	Title	Description
1	Enclosure	Main body of stainless steel
2	Display	Seven segment displays with annunciators
3	Knob	Two knobs on the side
4	Keypad	Five buttons membrane keypad
5	Gland	Four strain reliefs for cables
6	Base	Mounting bracket
7	Seal	Special screw for physical sealing
8	Cover	Back cover
9	Vent	Breather ventilation



### 2.3 OPENING ENCLOSURE

To open the 815BS cover, loosen eight screws on the back cover of the enclosure and flip down the back cover.



### 2.4 MOUNTING ENCLOSURE

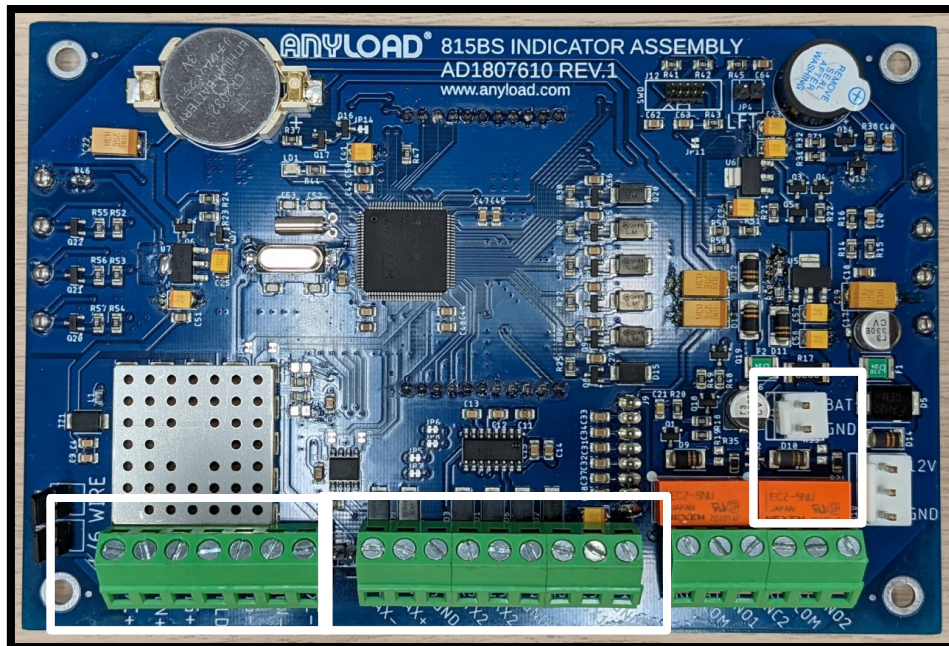
The 815BS indicators may be mounted on the desk with standard desk mount bracket provided in the package.




### 3. WIRING

#### 3.1 CONTROLLER BOARD TERMINALS

All communication signals, and load cell inputs can be terminated to the controller board via accessible screw terminals. These terminals are designed to accept serial data communication signals, 4/6 wire load cell inputs, and two relay outputs.





Port	Terminal	Description
1	Load cell	Can be connected to 4/6 wire load cells
2	Communication	Two independent ports provide RS232-1, and RS232-2
3	Battery	Internal battery connection

Symbol	Description
	<p><b>NOTICE!</b></p> <p>Availability of the options is subject to confirmation by manufacturer and may vary by firmware version                      Refer to the configuration section for instructions on how to configure the functions of indicator                      Refer to the installation section for instructions on how to access the wiring terminals</p>




### 3.2 ELECTRICAL POWER WIRING

The 815BS indicators are pre-wired AC devices with external UL approved wall adaptor installed via strain reliefs. The proper grounding is provided as default. The standard 815BS indicators have a ON / OFF power key to avoid internal battery drainage. Before any installations, make sure all power sources are disconnected. It is required to use a ground fault circuit interrupter to supply AC lines to the device at the site to avoid any risk or hazard. For the applications requiring custom wiring, all safety precautions and proper grounding must be considered. This table is based on color codes commonly used in North America. For other regions, the local codes must be obtained and observed.

The 815BS indicators also equipped with a re-chargeable internal lithium-ion battery. The battery is connected to the main board via a Bat connector. It is protected by an internal fuse to avoid any hazard. It is under regular charge by an internal charger via external wall adapter. The internal battery is a 10,000mAH lithium-ion re-chargeable battery. The 8156BS indicators can run in continuous operation on a fully charged battery for over 500 hours, considering to be connected to a single 700R load cell, and LCD back light off.

Power Cord		Power Supply	
Neutral	White	Red	12V
Live	Black	Black	GND
	Green	Yellow	




Item	AC Power Supply	Description
1	Input	AC 100-240V~ 0.5A 50-60HZ
2	Output	DC 12V 2A 25W
3	Enclosure	Encapsulated IP67
4	Protection	Short circuit, Overload, Over voltage
5	Approval	Class II UL / cUL approved, with CB CE

Symbol	Description
	<b>WARNING!</b> Make sure the power source is disconnected before any installation Make sure the site has proper grounding
	<b>CAUTION!</b> Any unauthorized change or alteration in default wiring may void warranty Any installation and wiring must be handled by authorized personnel
	<b>NOTICE!</b> Refer to the local electrical code for the wiring color codes Refer to the installation section for instructions to how to access to the wiring terminals

### 3.3 LOAD CELL WIRING

The 815BS indicators provide industry standard screw terminal ports with shield wire installation via screw terminals. The load cell wires coming from the cell to the indicator shall be entered to the unit via bottom strain reliefs and be terminated to the proper terminals. Both kinds of load cells with four and six wires can be connected to the indicator via load cell terminal. The 4/6 wire jumpers can be set accordingly based on the load cell type. For 4 wires load cells the jumpers must be closed. The load cell cable shield must be terminated to the shield terminal.

Signals	Loadcell	Indicator	Description
Positive	Excitation+	<b>EXC+</b>	Positive Excitation to the Load Cell
	Sense +	<b>SEN+</b>	Positive Sense to the Load Cell
	Signal +	<b>SIG+</b>	Positive Signal from the Load cell
Earth Ground	Shield	<b>SHLD</b>	Load Cell Shield Wire
Negative	Signal -	<b>SIG-</b>	Negative Signal from the Load Cell
	Sense -	<b>SEN-</b>	Negative Sense to the Load Cell
	Excitation -	<b>EXC-</b>	Negative Excitation to the Load Cell

Symbol	Description
	<b>WARNING!</b> Make sure the power source is disconnected before any installation Make sure the site has proper grounding and shielded earth wire
	<b>CAUTION!</b> Any unauthorized change or alteration in default wiring may void warranty Any installation and wiring must be handled by authorized personnel
	<b>NOTICE!</b> Refer to the configuration section for instructions to how to calibrate the scale Refer to the installation section for instructions to how to access to the wiring terminals




### 3.4 SERIAL COMMUNICATION WIRING

The 815BS indicators provide industry standard screw terminal ports with shield wire installation via screw terminals. The ports are automatically detected and adjusted upon start up. There are two communication ports available as RS232-1, and RS232-2. The serial communication wires coming to the indicator shall be entered to the unit via bottom strain reliefs and be terminated to the proper terminals.

The communication ports can be configured individually for different purposes such as streaming, and printing.

The communication ports can be terminated as follows:










Communication Protocol	Indicator	Peripehral	Description Function
RS-232-1 Streaming Port	<b>GND</b>	<b>GND</b>	Signal Ground
	<b>RX1</b>	<b>TXD</b>	Streaming Port Receive Data
	<b>TX1</b>	<b>RXD</b>	Streaming Port Transmit Data
RS-232-2 Printing Port	<b>GND</b>	<b>GND</b>	Signal Ground
	<b>RX2</b>	<b>TXD</b>	Printer Port Receive Data
	<b>TX2</b>	<b>RXD</b>	Printer Port Transmit Data

Symbol	Description
	<b>WARNING!</b> The use of RS232 is limited to 15m(50ft) Make sure the site has proper grounding
	<b>CAUTION!</b> Any unauthorized change or alteration in default wiring may void warranty Any installation and wiring must be handled by authorized personnel
	<b>NOTICE!</b> Refer to the configuration section F5 for instructions to how to configure inputs and outputs Refer to the installation section for instructions to how to access to the wiring terminals

## 4. CONFIGURATION

### 4.1 INDICATOR SETUP MENU

The 815BS function setup menu is consisted of different function blocks used to set different configuration values of 815BS indicators. There are eight function blocks currently available for configuration showed in the table below. Entering the setup menu is protected by a password for legal for trade applications. Any changes in setup menu values will result incrementing the audit trail.

Block	Menu	Description
	FORMAT	Functions Related to Scale Formats
	CONFIG	Functions Related to Scale Configuration
	CALIBRATION	Functions Related to Scale Calibration
	FILTERING	Functions Related to Scale Filtering
	COMPORT	Functions Related to Communication Ports
	AUXILIARY	Functions Related to Auxiliary Functions
	UTILITIES	Functions Related to Utility Functions
	-	N/A
	DIAGNOSTICS	Advance Diagnostics

+


### 4.2 INDICATOR OPERATING MODES

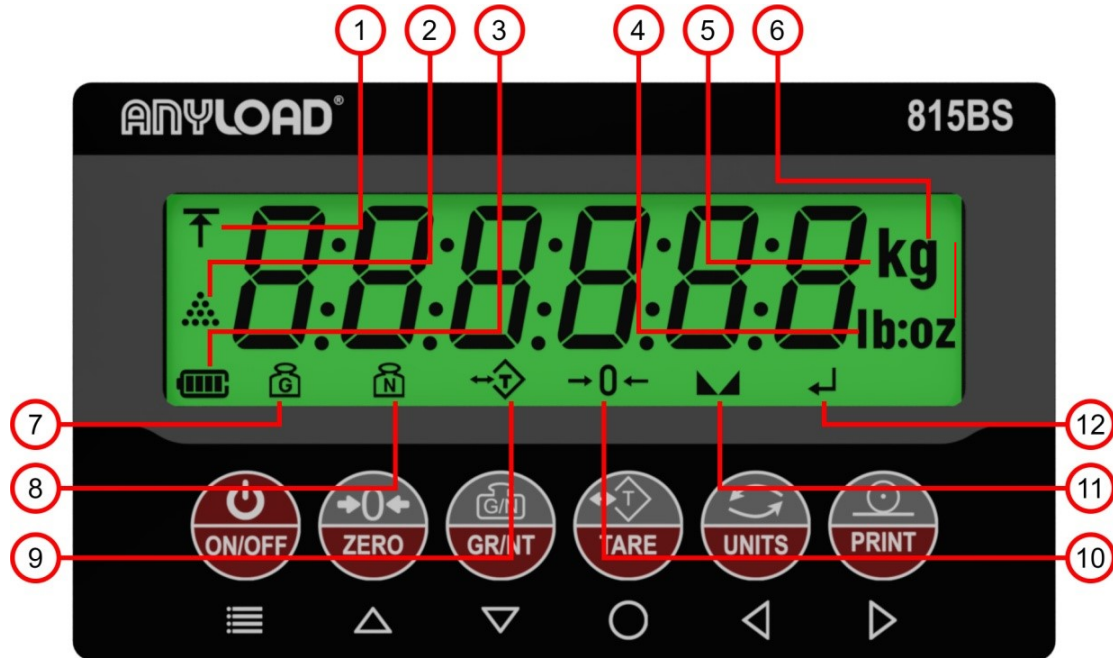The 815BS indicators can be used in three different modes.

Mode	Description
<b>Weigh Mode</b>	Normal weight mode: Normal weighing in legal for trade or nonlegal for trade applications Refer to F1, F2, and F3 for calibration.
<b>Peak Mode</b>	Peak mode function: Peak mode function in nonlegal for trade applications Refer to F6 for configuration.
<b>Count Mode</b>	Piece count function: Piece counting function for nonlegal for trade applications Refer to F6 for configuration.

### 4.3 INDICATOR DISPLAY SYMBOLS


The 815BS indicators provide twelve LCD annunciators for different functions and operation listed below.



Legend	LCD	Function	Description
1, 2	PEAK / COUNT	Peak / Count Indication	Auxiliary functions blinking or solid
3	BAT	Battery indication	Battery life indication full to empty
4	lb	lb unit indication	Pounds
5	kg / g	kg / g unit indication	Kilograms or Grams
6	oz	oz unit indication	Ounces
7	GR	Gross indication	Gross weight is displayed
8	NT	Net indication	Net weight is displayed
9	TR	Tare indication	Tare value is acquired
10	→0←	Zero indication	Center of zero
11	▾	Stability indication	Scale reading is stable
12	↩	Set Point Indication	Setpoint for different back light colors



### 4.4 INDICATOR MEMBRANE KEYPAD


The 815BS setup menu is used to calibrate the scale and configure main operating functions of the 815BS indicators. A six keys membrane keypad, located at front panel of the enclosure, is used to provide basic functions of the indicator enter or exit from, and navigate through setup menu functions as well. The 815BS setup menu is protected by password and electronics sealing for Legal or Trade (LFT) applications.

To turn the indicator ON or OFF use long press  (Press and hold).

To enter setup menu, press and hold  &  keys together for two seconds.

To exit from setup menu, use the same keys combination.

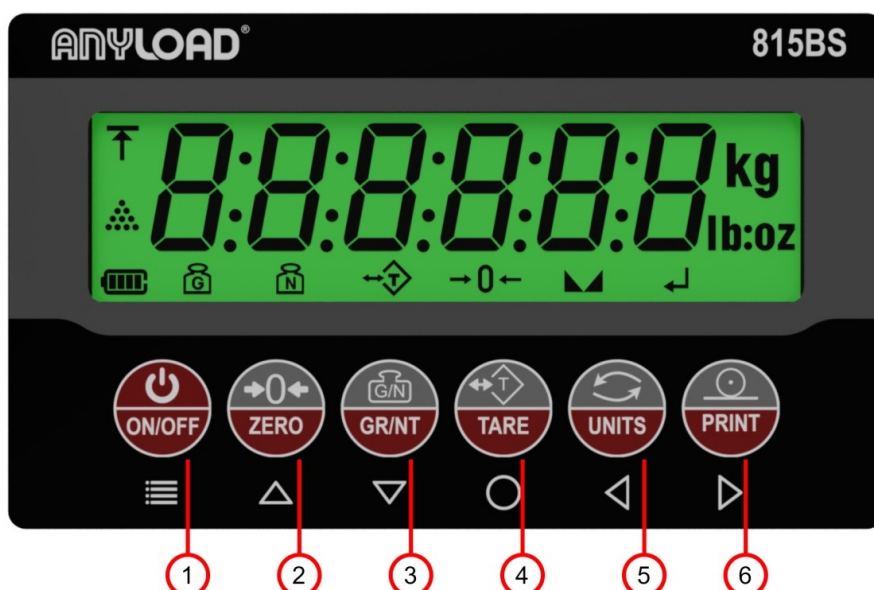
To navigate through menus, press short or hold  or  keys (UP or DOWN).

To enter or exit from a sub menu press  key (ENTER/ACCEPT).

To change a sub menu value, press  or  keys (UP or DOWN).

To change a value in an editor menu, press  or  keys (UP or DOWN).



















To change a digit in an editor menu, press  or  keys (LEFT or RIGHT).













The 815BS keypad basic and alternative operations are listed in below table.

The keypad is used for basic functions, entering setup menu, entering audit function, and editing values.



Keypad	Primary	Alternate	Description
	Zero	 Up	Weight Mode: Zero Scale Setup Menu: Up navigation through menu functions Editor: Change the value increasing
	Gross / Net Clear	 Down	Weight Mode: Switch gross / net. Long press clears tare Setup Menu: Down navigation through menu functions Editor: Change the value decreasing
	Tare	 Enter	Weight Mode: Tare Scale Setup Menu: Enters into a sub menu function Editor: Enter / Accept value
	Units Clock	 Left	Weight Mode: Switches units. Long press set clock Setup Menu: Changes a digit during editing a submenu Editor: Change the digit number to left
	Print	 Right	Weight Mode: Prints a string or ticket. Setup Menu: Changes a digit during editing a submenu Editor: Change digit number to right
 	N/A	  Enter Setup Exit Setup	Pressing ZERO and TARE together will enter setup A password is required to enter setup menu Use editor to enter password ( -0001- default) Use same keys to exit from setup menu
 	N/A	  Enter Audit	Pressing PRINT and TARE together will enter audit The audit trail switches between CFG and CAL Display shows CFG.000 / CAL,000 momentarily Use GR/NT key to exit

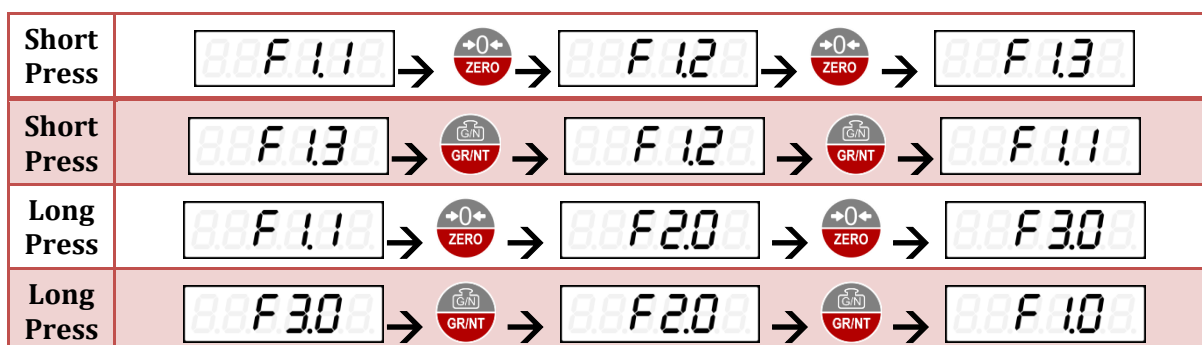
- ENTERING INTO SETUP MENU

Press and hold  &  keys together simultaneously for two seconds to enter setup menu, the SETUP message will appear. A password is required to enter into setup menu. Use  or  to change the value of the digit. Use  or  to change the digit to right or left. Press  when the correct password is entered. Then first function block F1.0 will be displayed.






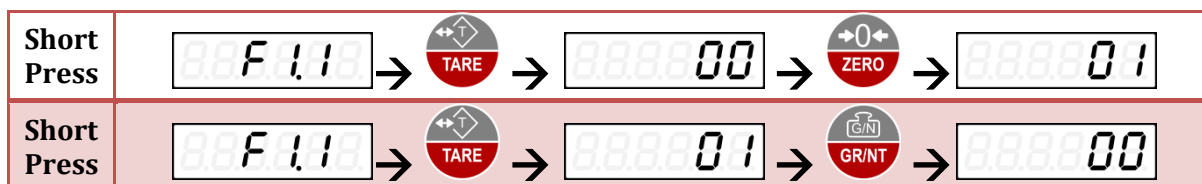
- NAVIGATING THROUGH MENU

To navigate through the menu, press  or  keys. A short press will cause FX.X to increase or decrease by 0.1 (move within the submenu) and a long press will increase or decrease by 1 (exit the submenu and go to the root menu).




- EDITING SUBMENU VALUES

Press  key to enter the shown submenu and the current setting of that submenu will be displayed. Press  or  keys to change the value of the submenu as required.






- *SETTING SUBMENU VALUE*

Press  key to accept the selected value and return to the submenu. A FX.X message showing corresponding function block will be displayed.









- *EXITING FROM SETUP MENU*

Press and hold  &  keys together simultaneously to save and exit the setup menu. A SAVED message will be displayed and then it will reset. To exit without saving, press and hold TARE button.









- *EDITING NUMERIC VALUE*

Press  key to enter the shown submenu and the current setting of that submenu. If a numeric value is displayed, use  or  to change value of the digit. Use  or  to change the digit to right or left. Press  when the desired value is entered.



- *CHANGING TIME DATE*

Press and hold  key to enter the time / date edit mode. This function is disabled as default. Use  or  to change the value of the digit. Use  or  to change the digit to right or left. Press  when the desired password is entered. Then first function block F1.0 will be displayed.

### 4.5 F1 FORMATS

Function related to divisions, decimals, units, and capacity formats of the scale.

Function	Value	Setting	Description
F1.0 Reserved		N/A	N/A
F1.1 Grad Size	<b>1d</b> 2d 5d 10d 20d 50d 100d	<b>1d</b> 2d 5d 10d 20d 50d 100d	Scale divisions. It sets the minimum display resolution. To be set before calibration.
F1.2 Decimal Point	<b>None</b> 0.0 0.00 0.000 0.0000	<b>None</b> 0.0 0.00 0.000 0.0000	Scale decimals. It sets the decimal points. To be set before calibration.
F1.3 Calibration Unit	<b>1</b> 2	<b>kg</b> lb	Calibration Unit. The unit used to calibrate the scale. To be set before calibration.
F1.4 Power up Unit	<b>1</b> 2 3 4	<b>kg</b> lb oz gr	Power up primary unit. Scale power up at this unit.
F1.5 Alternative Unit	0 1 <b>2</b> 3 4	None kg <b>lb</b> oz gr	First alternate unit.
F1.6 Alternative Unit	<b>0</b> 1 2 3 4	<b>None</b> kg lb oz gr	Second alternate unit.
F1.7 Capacity Setting	<b>005000</b> 000001 100000	<b>005000</b> 000001 100000	Scale capacity. It sets the capacity of scale. To be set before calibration.
F1.8 Over Capacity	0d 1d <b>2d</b> 2pc	0d 1d <b>2d</b> 2%	Over capacity. It sets the overload based on capacity. To be set before calibration.
F1.9 Reserved		N/A	N/A

**4.6 F2 CONFIGURATION**

Functions related to zero, stability, and tare configuration of the scale.

Function	Value	Setting	Description
F2.0 Zero Range	<b>2pc</b> 10pc 90pc	<b>2%</b> 10% 90%	Zero range. Scale can be zeroed within the range of set value. It is set 2% for legal for trade applications
F2.1 Zero Tracking	Off <b>0.5d</b> 1d 2d 3d	Off <b>1/2d</b> 1d 2d 3d	Automatic zero tracking. Scale maintains zero within the set division value.
F2.2 Power up Zero	<b>0</b> 1	<b>Off</b> Active	Power up zero scale. Scale attempt to zero on power up.
F2.3 Stability	Off <b>1d</b> 2d 3d 5d 10d	Off <b>1d</b> 2d 3d 5d 10d	Stability. Scale maintains stability within the set division value.
F2.4 Stability Timer	1-20 <b>4</b>	1-20 <b>4</b>	Stability timer. Each equal to 0.25 sec. Scale returns to stability within the time set.
F2.5 Unstable Blank	<b>0</b> 1	<b>Off</b> Active	Blank Weight. Scale blanks display if the weight is not stable.
F2.6 Tare Regulation	0 1 <b>2</b> 3	None CAN <b>NTEP</b> OIML	Tare Regulations. NONE: Tare can be acquired on any positive weight > 0. Tare can be cleared at any time. NTEP / US: Tare can be acquired on any positive weight > 0. Tare only can be cleared in gross mode at zero. CAN / Measurement Canada: Tare can be acquired only in gross mode weight > 0. Tare only can be cleared in gross mode at zero. OIML / EU: Tare can be acquired on any positive weight > 0. Tare only can be cleared in gross mode at zero.
F2.7 Tare Lock	<b>0</b> 1	<b>Off</b> No Tare	Tare lock. Tare button is disabled if set.
F2.8 Tare Auto	<b>0</b> 1	<b>Off</b> 1	Auto Tare. Acquires tare on positive weight values automatically.
F2.9 Clear Auto	<b>0</b> 1	<b>Off</b> 1	Auto Clear. Clears tare automatically when scale is at zero.

### 4.7 F3 CALIBRATION

Functions related to zero and span calibration of the scale. **Use this with caution!**

Function	Value	Setting	Description
F3.0 Reserved		N/A	
F3.1 Zero Scale	Zero Calibration	DEAD   CLEAR SCALE   -- CAL4-   DONE	Prompts CLEAR SCALE.  Clear the scale. Press Enter to dead load scale if desired. Press Left if want to abort operation.  Prompts DONE after successful operation. <b>! Section 5 CALIBRATION for more details.</b>
F3.2 Span Scale	Span Calibration	SPAN   LOAD SCALE   005000   -- CAL4-   DONE	Prompts LOAD SCALE.  Load scale with test wait and enter value. Press Left if want to abort operation. Press Enter to span scale if desired. Use editor menu to enter proper test weight value. Press Enter to span scale.  Prompts DONE after successful operation. <b>! Section 5 CALIBRATION for more details.</b>
F3.3 Reserved		N/A	
F3.4 Adc Count		N/A	Displays A/D raw count.
F3.5 Span Edit	000000	000000	Displays current span value to be edited if desired. <b>! Use this with caution. It changes span value.</b>
F3.6 Password Edit	-0001-	-0001-	Edit or change current password. Use editor to change value / digit. <b>! Use this with caution. It changes setup password.</b>
F3.7 Factory Reset	-0001-	-0001-	Asks for password to reset to factory default values. Use editor to enter current password. <b>! Use this with caution. It resets all calibration values.</b>
F3.8 Send		N/A	For service use only.
F3.9 Receive		N/A	For service use only.

**4.8 F4 FILTERING**

Functions related to the filtering.

Function	Value	Setting	Description
F4.0 Filter Preset	1	Light	Filter setting. It will set all filters accordingly for the optimized performance. It starts with light filtering, ends to the heavy filtering.
	2	2	
	3	Medium	
	4	4	
	5	Heavy	
F4.1 Digital Filter	0.5	Low	Digital Filter.
	1.0	1	
	2.0	2	
	3.0	High	
F4.2 Average Filter	10	Low	Average Filter.
	50	1	
	75	2	
	100	3	
	150	4	
	200	High	
F4.3 Filter Threshold	2	High	Filter threshold for the Scale fast response.
	4	5	
	8	4	
	12	3	
	14	2	
	18	Low	
F4.4 Filter Sense	2	High	Filter sensitivity for the scale response.
	5	5	
	8	4	
	10	3	
	12	2	
	15	Low	
F4.5 Display Filter	0	Fast	Display Filter. It sets display update rate in seconds.
	0.25	0.25 sec	
	0.50	0.50 sec	
	0.75	0.75 sec	
	1	Slow	

## 4.9 F5 COMMUNICATIONS

Functions related to the serial communication ports.

Function	Value	Setting	Description
F5.0 Port1 Baud Rate	1200 2400 4800 <b>9600</b> 19600 38400	1200 2400 4800 <b>9600</b> 19600 38400	RS232-1 baud rate setting
F5.1 Port1 Data Bit	<b>8-None</b> 7-Even 7-Odd	<b>8-None</b> 7-Even 7-Odd	RS232-1 data bits
F5.2 Port1 Mode	0-5 <b>0</b>	0-5 <b>Stream</b>	RS232-1 mode selection 0 streaming standard string 1 send out weight with PRINT key 2 send out simple ticket with PRINT key 3 N/A 4 send out weight if scale is stable with PRINT key 5 port is off
F5.3 Port2 Baud	<b>9600</b>	<b>9600</b>	RS232-2 baud rate setting Same as RS232-1
F5.4 Port2 Data Bit	<b>8-None</b>	<b>8-None</b>	RS232-2 data bits Same as RS232-1
F5.5 Port2 Mode	0-5 <b>1</b>	0-5 <b>Print</b>	RS232-2 mode selection Same as RS232-1
F5.6 N/A		N/A	N/A
F5.7 N/A		N/A	N/A
F5.8 N/A		N/A	N/A
F5.9 Stream Delay	0 <b>0.25</b> 0.50 0.75 1	0 <b>0.25s</b> 0.50s 0.75s 1s	Universal streaming delay for all ports in seconds. It sets the time delay between each streaming string.



**4.10 F6 AUXILIARIES**

Functions related to peak, count, and relay auxiliary functions.


Function	Value	Setting	Description
F6.0 Peak Mode	0 1	Off On	Peak mode activation  <b>! See Section 7 AUXILIARIES for more detail.</b>
F6.1 Peak Value	000000	000000	Peak mode threshold
F6.2 Peak Reset	0 1	Off On	Peak mode automatic reset
F6.3 Peak Delay	0-20 0	0-20 0	Peak mode automatic reset delay
F6.4 Count Mode	0 1	Off On	Piece count mode activation  <b>! See Section 7 AUXILIARIES for more detail.</b>
F6.5 Count Average	Put 2 Put 5 Put 10 Put 20 Put 50 Put 100	Put 2 Put 5 Put 10 Put 20 Put 50 Put 100	Establishes the average piece weight. The editor asks to enter the number of pieces. After adjusting numbers to desired value, Put number of pieces on scale and take average weight. Average weigh will be stored for piece count mode.  If F6.4 is off, it shows FAIL.
F6.6 Set Point	0 1	Off On	Set point function activation It uses green, red, and amber back lighting <b>! See Section 7 AUXILIARIES for more detail.</b>
F6.7 Set Point 1	000000	000000	Set point 1 threshold  Use editor to set the SP1 value
F6.8 Set Point 2	000000	000000	Set point 1 threshold  Use editor to set SP2 value
F6.9 Buzzer	0 1	Off On	The keypad buzzer can be set on or off.




## 4.12 F7 UTILITIES

Functions related to auto timers' utility functions.

Function	Value	Setting	Description
F7.0 On Off Auto Timer	<b>Off</b>	<b>Off</b>	Off: the auto timer will be off and indicator remains on.
	2.0	2.0min	Auto timer can be set in minutes to a maximum 60 minutes.
	5.0	5.0min	
	10.0	10.0min	The indicator will be turned automatically off after the time is over.
	30.0	30.0min	
	60.0	60.0min	
F7.1 Back Light Timer	Off	Off	Off: the auto timer will be off and back light remains on.
	2.0	2.0s	Auto timer can be set in seconds to a maximum 60 seconds.
	<b>5.0</b>	<b>5.0s</b>	
	10.0	10.0s	The back light will be automatically off after the time is over.
	30.0	30.0s	
	60.0	60.0s	
F7.2 Back Light Color	None <b>GrEE</b> n rEd yELLo	Off <b>Green</b> Red Amber	Off: no back light The back light colors in green, red, or amber. The colors are controlled automatically in set points.



Use  to return to the weigh mode in calibration.


Symbol	Description
	<b>WARNING!</b> For proper wiring of the load cell refer to wiring section For 4/6 wire load cells the jumpers must be set accordingly on the main board
	<b>CAUTION!</b> The setup menu is protected by password for legal for trade applications The audit trail function CAL, CFG increments by one every time a calibration is performed
	<b>NOTICE!</b> For legal for trade applications the LFT jumper on main board must be open. Refer to the F1, F2, and F3 for instructions to how to configure the scale before calibration




## 5. CALIBRATION

The 815BS indicators utilize a reliable two point's calibration called dead load (zero calibration), and span scale (span calibration). The calibration is done through two simple sub menus inside the setup menu. The setup menu is protected by a password for the legal for trade applications. The audit trail function also is available to record the calibration and configuration changes.



Function	Value	Setting	Description
F3.1 Zero Scale	Zero Calibration	DEAD   CLEAR SCALE   CAL 4   DONE	Prompts DEAD / CLEAR - SCALE.  Clear the scale. Press Enter to dead load scale if desired. Press Left if want to abort operation.  Prompts DONE after successful operation.
F3.2 Span Scale	Span Calibration	SPAN   LOAD SCALE   005000   CAL 4   DONE	Prompts SPAN / LOAD - SCALE.  Load scale with test weight and enter value. Press Left if want to abort operation. Press Enter to span scale if desired. Use editor menu to enter test weight value. Press Enter to span scale.  Prompts DONE after successful operation.









Use  to abort function before is executed.




Symbol	Description
	<b>WARNING!</b> For proper wiring of the load cell refer to wiring section For 4/6 wire load cells the jumpers must be set accordingly on the main board
	<b>CAUTION!</b> The setup menu is protected by password for legal for trade applications The audit trail function CAL, CFG increments by one every time a calibration is performed
	<b>NOTICE!</b> For legal for trade applications the LFT jumper on main board must be open. Refer to the F1, F2, and F3 for instructions to how to configure the scale before calibration



Before performing calibration, all functions related to F1 FORMAT, and F2 CONFIG inside the setup menu may be set accordingly or left at default values. It is recommended to navigate

through F1, and F2 functions before any calibration. Use   for ENTER / ACCEPT.







### 5.1 ZERO CALIBRATION

1. Navigate to F3.1 inside setup menu, and press Enter    

2. Display shows   


3. Clear the scale platform and press Enter   





4. Display counts down to zero calibration  
5. Display shows DONE at the end.

### 5.2 SPAN CALIBRATION

1. Navigate to F3.2 inside setup menu, and press Enter    

2. Display shows   

3. Load the scale with the test weight, and press Enter   

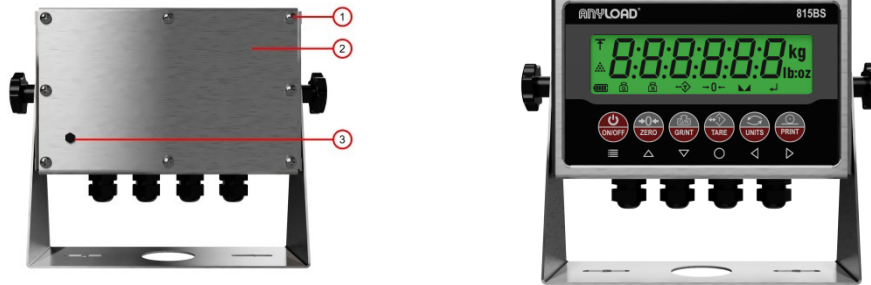
4. Display shows the default test weight value to be edited 

5. Using the editor keys, enter desired test weight value and press Enter  
6. Display counts down to span calibration  
7. Display shows DONE at the end.
8. The calibrated weight is displayed with a blinking C, indicating inside the setup menu.

## 6. SEALING



### 6.1 PHYSICAL SEALING


The 815BS indicator can be sealed physically by two special screws provided on the back cover. It can be used as complementary to electronic sealing. The LFT jumper on main board also must be kept open for legal for trade application for password protection of the setup menu.



### 6.2 ELECTRONIC SEALING

The 815BS indicators setup menu is protected by the password. The 815BS indicators therefore can be sealed electronically by using audit trail function. The audit trail can be accessed from front keypad as follows:

Press and hold  &  keys together simultaneously for two seconds to enter audit trail function, the AUDIT message will appear. Then CAL / CFG momentarily will be displayed.



CAL: Increments by one every time a calibration F3 is performed




CFG: Increments by one every time a change in F1, F2, or F3 is performed



Use  CLEAR to exit from audit trail function.

The LFT jumper header on main board must be open in legal for trade applications.

Symbol	Description
	<p><b>NOTICE!</b></p> <p>The indicator is protected by password to enter into setup menu                      Make sure the password is recorded somewhere safe in case is needed                      The CAL/CFG is activated in factory. Therefore, it may not be set to 1 as default</p>

## 7. AUXILIARIES

### 7.1 PEAK MODE


The 815BS can be used to detect and establish peak weights using peak mode. The peak mode can be activated inside setup menu. The peak mode has a threshold value that must be set inside setup menu. There is option of the automatic peak and clear as described in the menu.


An LCD symbol on the front panel is used to display and identify peak mode operation.

Function	Value	Setting	Description
F6.0 Peak Mode	0 1	0 1	Peak mode activation
F6.1 Peak Threshold	000000	000000	Peak threshed value
F6.2 Peak Auto	0 1	0 1	Peak automatic clear
F6.3 Peak Delay	0-20 0	0-20 0	Peak auto clear delay Each increment equals to 0.25 sec

The PEAK annunciator operates based on below table if the function is enabled.

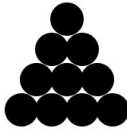
LCD	Function	Description
PEAK	Solid	The peak weight is established
PEAK	Blinking ½ Seconds	Normal weigh mode with peak mode activated
PEAK	Off	The peak mode is off

Use  CLEAR long press to clear established peak weight.


Symbol	Description
	<p><b>NOTICE!</b></p> <p>Use GR/NT key long press clears the peak weight The peak mode only used for none legal for trade applications. The minimum peak division is 1d</p>

## 7.2 COUNT MODE

The 815BS indicators utilize a piece counting mode to count number of pieces based on average weight of the piece established in setup menu.

Function	Value	Setting	Description
F6.4 Count Mode	<b>0</b> 1	<b>Disabled</b> Enabled	If set to 0, the piece count is off. If set to 1, the piece count is enabled.
F6.5 Count Average	<b>Put 2</b> Put 5 Put 10 Put 20 Put 50 Put 100	<b>Put 2</b> Put 5 Put 10 Put 20 Put 50 Put 100	Load Pieces on the scale. Select desired number of pieces. Press Enter to establish average piece weight. If the function is disabled it displays FAIL.  




In normal weight mode, use  key to switch between weight and count mode.

The piece count mode does not allow changing the units. The only unit available is the primary unit which scale is calibrated. It can be kg or lb.

The COUNT annunciator operates based on below table.

LCD	Function	Description
COUNT	Solid	Function is enabled. Piece count is displayed
COUNT	Blinking ½ Seconds	Function is enabled. Weight is displayed
COUNT	Off	Function is disabled in setup menu.

Symbol	Description
	<b>NOTICE!</b>  Use UNIT key to switch between piece count and weight mode The piece count is only available in primary calibrated unit for none legal for trade applications The minimum count division is 1d

### 7.3 SET POINT

The 815BS indicators utilize a dual set point function mode to perform different applications such as simple check weighing using different back light colors. The two set point values which indicate the threshold weight can be set inside the setup menu. The RED, GREEN, and AMBER back light then will function accordingly.

Function	Value	Setting	Controlled by Commands
F6.6 Set Point	0 1	Disabled Enabled	Set point function can be enabled or disabled
F6.7 Set Point 1	000000	000000	Edit set point 1 to control lower set point RED
F6.8 Set Point 2	000000	000000	Edit set point 2 to control higher set point AMBER



AMBER, Limit Over SP2



GREEN, Between SP1 and SP2



RED, Limit Under SP1

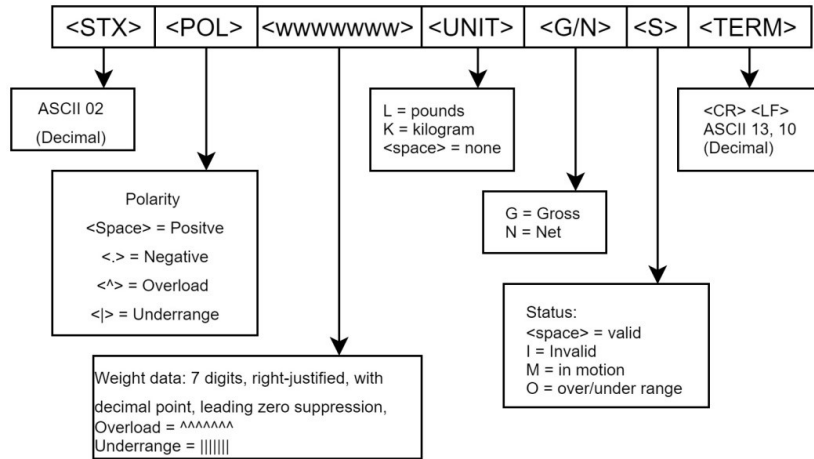
LCD	Function	Description
SET	Amber	The weight value is greater than SP2. $W > SP2$
SET	Green	The weight value is between SP1 and SP2. $SP1 < W < SP2$
SET	Red	The weight value is less than SP1. $W < SP1$

Symbol	Description
	<p><b>NOTICE!</b></p> <p>The set point function can be used to activate a check weighing annunciator The minimum threshold weight division is 1d</p>



### 7.4 SERIAL PROTOCOLS

The standard string format to be transmitted by RS232-1 and RS232-2 of 815BS indicator includes start of the text character, weight numeric values, unit character, status character, and end of the text character. An example of string protocol for single remote display application connected to an indicator is illustrated below.



### 7.5 BACK LIGHT

The 815BS indicators can be set to three different colors for back lighting in the normal weight mode. The function can be set inside setup menu. When the set point is activated, the back light is automatically set by set points. If the back light is set to OFF, it always remains off. The back light is set to AMBER when inside the setup menu.

Function	Value	Setting	Controlled by Commands
F7.1 Back Light Timer	Off 2.0 <b>5.0</b> 10.0 30.0 60.0	Off 2.0s <b>5.0s</b> 10.0s 30.0s 60.0s	Off: auto timer will be off and back light remains on. Auto timer can be set in seconds to a maximum 60sec. The back light will be off after the time is over.
F7.2 Back Light Color	None <b>GrEE</b> n rEd yELLO	Off <b>Green</b> Red Amber	Off: no back light The back light colors in green, red, or amber. The colors are controlled automatically in set points.



## 7.6 TICKET PRINTING

The 815BS can be used to print a simple ticket to print gross, tare, and net weight, with a time and date stamp.

One of the RS232-1, or RS232-2 can be set to print tickets based on the usage of comports.

Function	Value	Setting	Controlled by Commands
F5.2 Port1 Mode	2	2	RS232-1 mode selection 2 send out simple ticket with PRINT key
F5.5 Port2 Mode	2	2	RS232-1 mode selection 2 send out simple ticket with PRINT key

The simple ticket includes a time / date stamp. To activate and set proper format, clock can be activated inside setup menu.

Function	Value	Setting	Description
F9.0 Clock Setting	0 1 2 3 4	0 1 2 3 4	Clock Setting. It is disabled as default set to 0 It activates Time / Date Stamps if none 0. If activated, set it using UNIT key long press in weight mode.  0 It is disabled 1 International/12hr format (dd/mm/yy) (HH:MMAM/PM) 2 US/CAN/12hr format (mm/dd/yy)(HH:MMAM/PM) 3 International/24hr format (dd/mm/yy) (HH:MM ) 4 US/CAN/24hr format (mm/dd/yy)(HH:MM)

The simple ticket format is as follows:

Title	Value	Description
Time:	12/24HR	Time stamp can be set to 12 or 24 hours formats
Date:	US/CAN/INT	Date can be set to US, CAN, or International formats
Gross:	000000	Prints gross weight with proper unit
Net:	000000	Prints net weight with proper unit
Tare:	000000	Prints tare value with proper unit

Symbol	Description
	<p><b>NOTICE!</b></p> <p>To set indicator in ticket printing format use F5 inside setup menu                      Refer to the troubleshooting diagnostic for error codes                      Refer to the configuration section for more information on advance diagnostic</p>

## 8. TROUBLESHOOTING

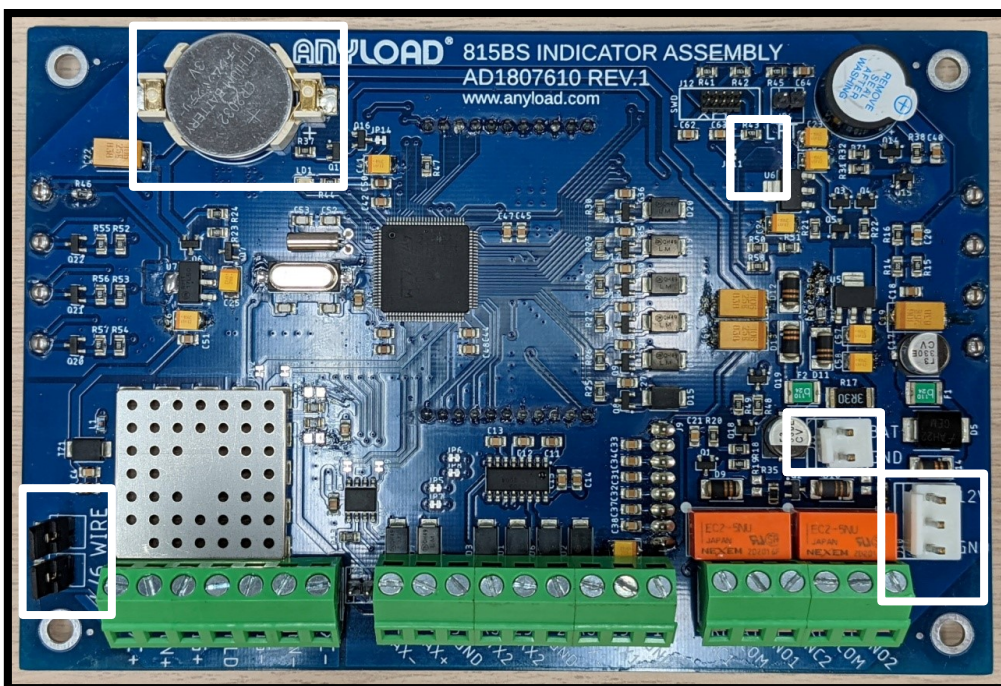
The 815BS indicators have comprehensive tools for troubleshooting, including diagnostic lights, onboard lights, error codes, message codes, and advance diagnostics inside setup menu. In cases where the failure or malfunctions is detected diagnostic tools can be used to identify the problems.


The indicator is supplied by an internal battery when is plugged off the wall. A 2032 type coin battery is located on board to keep the time and date. It is installed on a socket and is replaceable.

The LED LD1 on the main board can be used as basic diagnostic for functionality of the indicator. It will blink ½ seconds showing the normal operation of the indicator.

The position of the jumpers on the main board must be carefully observed and set.

### 8.1 CONTROLLER BOARD



Symbol	Description
	<p><b>NOTICE!</b></p> <p>The battery is rated for a 2032-coin cell type  Refer to the troubleshooting diagnostic lights and push buttons section for more information  Refer to the configuration section for more information on advance diagnostic</p>

## 8.2 ERROR CODES


The 815BS indicators have a comprehensive error code messages to identify the issues, and to operate under guidelines of the regulatory bodies.

Error	Description	Reason
--E0--	Scale Overload	Capacity / Over Setting F1.7, and F1.8
--E1--	Can't Zero	Unstable / Zero Range Setting F2.0
--E2--	Can't Tare	Unstable / Tare Regulation Setting F2.6
--E3--	Can't Print	Unstable / Scale is Not Stable
--E4--	Can't Zero on Power Up	Unstable / Exceeds Zero Range
--E5--	Calibration Checksum Error	Set Factory Default / Call for Service
--E6--	Zero Checksum Error	Set Factory Default / Call for Service
--E7--	Can't Clear Tare	NTEP/CAN/OIML Tare Regulation F2.6
--E8--	Can't Display Weight	Out of Range Display / Scale Calibration
--E9--	Can't Display Count	Out of Range Counts / Scale Calibration

## 8.3 JUMPER SETTING

The 815BS have few jumper headers on the main board. They are to be set accordingly.

Label	Description	Reason
LFT	Non-Legal for Trade	Closing this will bypass setup password
4/6 WIRE1	4/6 Wire Load Cells	Close this for 4 wire load cells with no sense line
4/6 WIRE2	4/6 Wire Load Cells	Close this for 4 wire Load cells with no sense line

Symbol	Description
	<p><b>NOTICE!</b></p> <p>LFT jumper must be open for Legal for Trade applications                      Do Not jumper any other jumpers on the board, as may cause damage to the device                      4/6 Wire jumpers are closed as default for both 4 or 6 wire load cells</p>


### 8.4 BATTERY SYMBOL

The 815BS indicators are equipped with an internal battery with a built-in charger. When the indicator is plugged in to the wall, it will re charge the battery and supplies the indicator. When the indicators are plugged off the wall, the battery will supply the indicator.

The internal battery is a 7.4V / 10,000mAH lithium- ion battery, capable of supplying the indicator for up to 500 hours of continuous operation, when the back light is off, and one 700R load cell is connected.

The symbol of the battery is located on the main LCD for basic troubleshooting of the internal battery.


LCD	Normal	Description
Empty	Flashing	Battery is not installed
Empty	Solid	Battery is empty
One	Solid	Battery on %25 charged
Half	Solid	Battery on %50 charged
Three	Solid	Battery on %75 charged
Full	Solid	Battery is fully charged
Full	Flashing	Battery is charging


Symbol	Description
	<p><b>NOTICE!</b></p> <p>The battery is rated 7.4V at 10,000mAH                      The battery is protected by a solid-state fuse                      The batter is under constant re charge when the indicator is plugged in</p>

### 8.5 ADVANCE DIAGNOSTIC

The diagnostic section of the inside menu is used for display testing and clock setting.

Function	Value	Setting	Description
F9.0 Clock Setting	0 1 2 3 4	0 1 2 3 4	Clock Setting. It is disabled as default set to 0. It activates Time / Date Stamps if not 0. If activated, set it using UNIT long press in weight mode.  0 It is disabled. 1 International/12hr format (dd/mm/yy) (HH:MMAM/PM) 2 US/CAN/12hr format (mm/dd/yy)(HH:MMAM/PM) 3 International/24hr format (dd/mm/yy) (HH:MM) 4 US/CAN/24hr format (mm/dd/yy)(HH:MM)
F9.1 Display Test	XXXXXX	None	Runs a full display test

In normal weight mode, use  long press key to edit the time / date in CLOCK mode.

Symbol	Description
	<p><b>NOTICE!</b></p> <p>The battery is rated for a 2032 coin cell type for clock                      The clock is used to ticket stamps if activated                      The clock can be edited in weight mode using UNIT long press if is activate</p>



Please Contact our Authorized Dealer for Technical Assistance:

*Anyload Weigh & Measure Inc.*  
*North America Toll Free: 1. 855.ANYLOAD (269.5623)*  
*Email: [info@anyload.com](mailto:info@anyload.com)*  
*[www.anyload.com](http://www.anyload.com)*



9001:2015



**ANYLOAD<sup>®</sup>**